

Different Video Connections

On devices with more than one video connection, like DVD players and game systems such as Sony Play Station, X Box and Nintendo, connecting them to the TV can be done using any of the following options. Using more than one is unnecessary. Note that the stereo **audio** connection remains the same in all cases.

Using the **Composite** video (option 1) connection requires a single RCA cable and provides good video quality. Using the **S** video (option 2) connection requires a single S video cable and provides better video quality. Using the **Component** (option 3) video connection requires three RCA cables and provides the best video quality.

